



Photon counting modules

C11202 series

Single pixel photon counting module for low-light-level detection

The C11202 series is a single-photon counting module capable of detecting low light levels. The C11202 series is made up of a thermoelectrically cooled single-pixel photon counter (SPPC), an amplifier, a comparator, a high-voltage power supply circuit, and a temperature controller. The photosensitive area is available in two sizes of ϕ 50 µm and ϕ 100 µm, and such small photosensitive areas offer a low dark count. Modules operate just by connecting them to an external power supply (±5 V).

Features

- High sensitivity in the short wavelength range
- Low dark count
- Low afterpulse

Applications

- Low-light-level measurement
- Particle diameter measurement
- Fluorescence measurement
- Analytical instrument

Structure

Parameter	Symbol	C11202-050	C11202-100	Unit
Internal photodetector	-	Single-pixel photon counter		
Photoseinsitive area size	-	φ50	φ100	μm

Absolute maximum ratings

Parameter	Symbol	Condition	C11202-050	C11202-100	Unit
Supply voltage	Vs		±6		
Operating temperature	Topr	No condensation	-10 to +40		
Storage temperature	Tstg	No condensation	-20 to +70		

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.


Electrical and optical characteristics (Typ. Ta=25 °C, $\lambda = \lambda p$, Vs=±5 V, unless otherwise noted)

Parameter	Symbol Condition	C11202-050		C11202-100		Linit			
	Symbol	Condition	Min.	Тур.	Max.	Min.	Тур.	Max.	Unit
Spectral response range	λ		320 to 900		320 to 900		nm		
Peak sensitivity wavelength	λр		-	450	-	-	450	-	nm
Element temperature (set temperature)	Td		-	-20	-	-	-20	-	°C
Photon detection efficiency	PDE		60	70	-	60	70	-	%
Dark count	-		-	7	25	-	30	100	cps
Afterpulse probability	-	100 ns to 500 ns	-	0.1	-	-	0.1	-	%
Comparator output	-		TTL compatible		TT	TTL compatible		-	
Maximum count rate	-		-	30	-	-	20	-	Mcps

Electrical characteristics


Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit	
Supply voltage	+Vs		+4.75	+5	+5.25	V	
	-Vs		-4.75	-5	-5.25	v	
Current consumption	Ic	+Vs	-	+200	+1000	m۸	
	IC -Vs	-Vs	-	-20	-40	- mA	

Block diagram

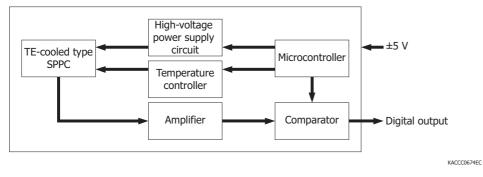


Connection example

Using the supplied power cable, connect the photon counting module to a power supply. You can count output pulses by connecting the photon counting module to a frequency counter.

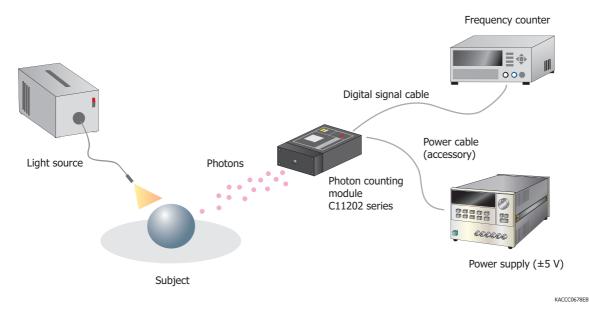





Measurement example

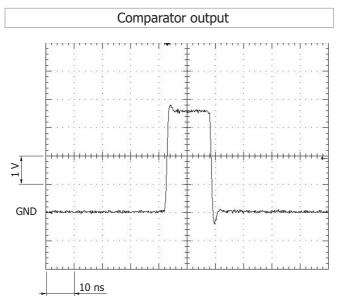


Photon detection efficiency vs. wavelength

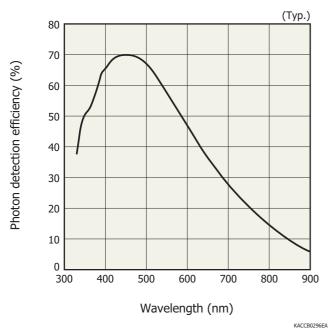

Linearity (typical example)

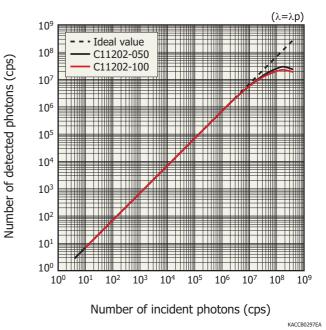

Dimensional outline (unit: mm)

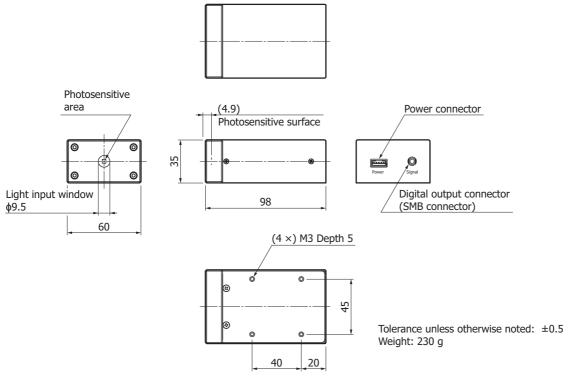

KACCA0317EB



Accessories

- · Power cable
- · Instruction manual

Options (sold separately)

Coaxial converter adapter A10613 series

The A10613 series is a coaxial adapter that converts the SMB coaxial connector for signal-output on the photon counting module to a BNC or SMA coaxial connector. This adapter allows connecting a BNC or SMA cable to the photon counting module.



A10613-01 (SMB-BNC)

A10613-02 (SMB-SMA)

Precautions

- · For cleaning the product, wipe using a clean, soft, dry cloth. Do not use organic solvents such as thinner and acetone.
- · Do not cover the unit with a dark cloth or something similar while the product is running. Covering the product can cause the internal temperature to rise and prevent it from operating normally.

Related information

http://www.hamamatsu.com/sp/ssd/doc_en.html

- Precautions
- Notice

Information described in this material is current as of October 2019.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.



www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

LI2OF1 ICHIIIO-CHO, HIgaSHFKU, HallahalSu CUV, 453-6336 Japani, Helephone: (01/35-454-5311, PAX. (01/35-454-5164 US.A: Hamamatsu Photonics: 360 Foothill Road, Bridgewater, NJ. 36807, US.A., Telephone: (1)968-231-231-8, E-mail: usa@hamamatsu.com Gernany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Hersching an Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8, E-mail: info@hamamatsu.de France: Hamamatsu Photonics France S.A.R.L: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 9182 Massy Cedex, France, Telephone: (49)8152-375-0, Fax: (33)1 69 53 71 10, E-mail: info@hamamatsu.de France: Hamamatsu Photonics France S.A.R.L: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 9182 Massy Cedex, France, Telephone: (33)1 69 53 71 10, Fax: (33)1 69 53 71 10, E-mail: info@hamamatsu.de Northe Lurope: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01, E-mail: info@hamamatsu.se Italy: Hamamatsu Photonics IChina Con, Ltd.: B1201, Jiaming Center, No.27 Dongsanhuan Bellu, Chaoyang District, 100020 Beljing, P.R.China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866, E-mail: hpc@hamamatsu.com.tw Taiwan: Hamamatsu Photonics Taiwan Co., Ltd.: 8F-3, No. 158, Section2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (86)3-659-0080, Fax: (88)3-659-0081, E-mail: info@hamamatsu.com.tw