

The S9981-01CT is a photodiode that is applicable to lead-free solder reflow and has an extremely wide operating and storage temperature range (-40 to +125 °C). The small and thin leadless package allows reducing the mount area on a printed circuit board.

Features

Applications

Compatible with lead-free reflow soldering

Surface mount type, compact, thin leadless package

- Operating/storage temperature: -40 to +125 °C
- Photosensitive area: 1.3 × 1.3 mm
- High sensitivity: 0.65 A/W (λ=960 nm)

Raindrop detection

Sunlight detection and the like

Structure

Parameter	Specification	Unit
Photosensitive area	1.3×1.3	mm
Package	Glass epoxy	-
Seal material	Silicone resin	-

Absolute maximum ratings


Parameter	Symbol	Condition	Value	Unit
Reverse voltage	VR max.	Ta=25 °C	10	V
Operating temperature	Topr	No dew condensation*1	-40 to +125	°C
Storage temperature	Tstg	No dew condensation*1	-40 to +125	°C
Reflow soldering conditions	Tsol	JEDEC MSL 4	Peak temperature: 250 °C, twice (see P.5)	-

*1: When there is a temperature difference between a product and the surrounding area in high temperature environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.


Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.


Electrical and optical characteristics (Ta=25 °C)

Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit
Spectral response range	λ		-	320 to 1100	-	nm
Peak sensitivity wavelength	λр		-	960	-	nm
Photosensitivity	S	λ=λp	0.55	0.65	-	A/W
Short circuit current	Isc	100 <i>lx</i> , 2856 K	-	1.65	-	μA
Temperature coefficient of short circuit current	-		-	+0.1	-	%/°C
Half-power angle	-		-	±60	-	degrees
Dark current	ID	VR=5 V	-	0.01	1	nA
Temperature coefficient of dark current	TCID		-	1.12	-	times/°C
Rise time	tr	VR=0 V, RL=1 kΩ 10 to 90%	-	0.5	-	μs
Terminal capacitance	Ct	VR=0 V, f=10 kHz	-	200	400	pF




Photosensitivity temperature characteristics

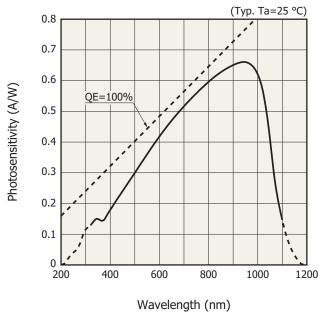

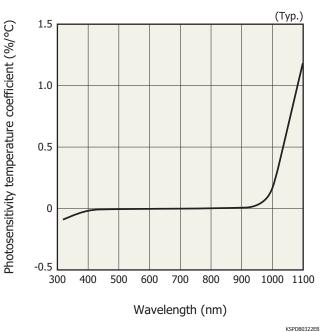


KSPDB0385EA




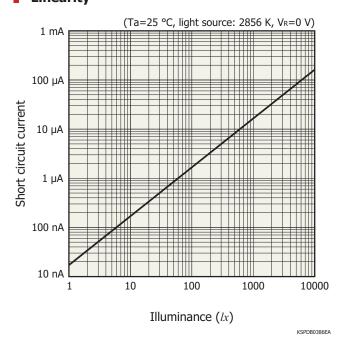

Dark current vs. reverse voltage

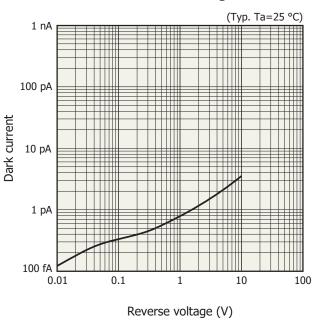


KSPDB0387EA

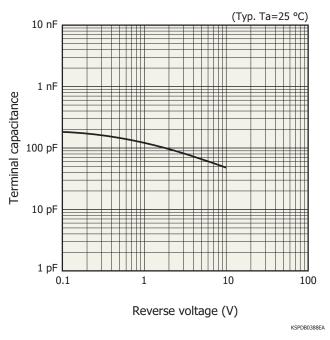

Terminal capacitance vs. reverse voltage


Directivity

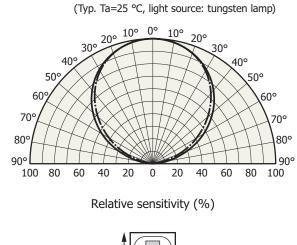




KSPDB0389EB

Dimensional outline (unit: mm)

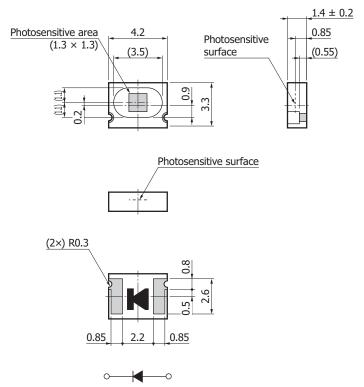

Tolerance unless otherwise noted: ± 0.15 , $\pm 2^{\circ}$ Chip position accuracy: with respect to package center X $\leq \pm 0.2$, Y $\leq \pm 0.2$, $\theta \leq \pm 2^{\circ}$

Recommended land pattern

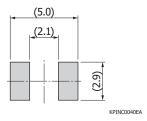

HAMAMATSU


KSPDA0218EA

Standard packing specifications

Reel (conforms to JEITA ET-7200)


Dimensions	Hub diameter	Tape width	Material	Electrostatic characteristics
254 mm	100 mm	12 mm	Polystyrene	Conductive

Embossed tape (unit: mm, material: polystyrene, conductive)

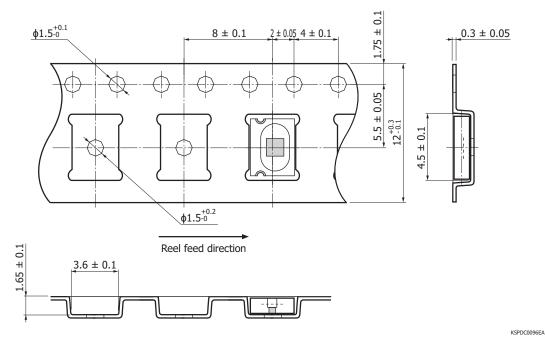

- Packing quantity 2000 pcs/reel
- Packing type Reel and desiccant in moisture-proof packaging (vacuum-sealed)



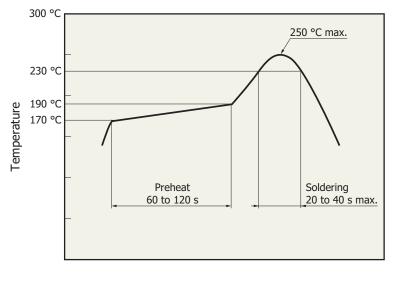

Recommended reflow soldering conditions

Time

KPINB0440EA

- This product supports lead-free soldering. After unpacking, store it in an environment at a temperature of 30 °C or less and a humidity of 60% or less, and perform soldering within 72 hours.
- The effect that the product receives during reflow soldering varies depending on the circuit board and reflow oven that are used. When you set reflow soldering conditions, check that problems do not occur in the product by testing out the conditions in advance.

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

- Precautions
- · Disclaimer
- · Surface mount type products
- Technical information
- · Si photodiode / Application circuit examples

Information described in this material is current as of February 2020.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

MAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218, E-mail: usa@hamamatsu.com Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (4)91852-375-0, Fax: (4)91852-265-8, E-mail: info@hamamatsu.de France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (3)1 69 53 71 00, Fax: (3)1 69 53 71 10, E-mail: infos@hamamatsu.fr United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44)1707-294888, Fax: (44)1707-325777, E-mail: info@hamamatsu.co.uk North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01, E-mail: info@hamamatsu.se Italy: Hamamatsu Photonics Italia S.r.I.: Strada della Moia, 1 int. 6, 2020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it China: Hamamatsu Photonics Talia S.r.I.: Strada della Moia, 1 int. 6, 2020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it China: Hamamatsu Photonics Talia S.r.I.: Strada della Moia, 1 int. 6, 2020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it China: Hamamatsu Photonics Talia S.r.I.: Strada della Moia, 1 int. 6, 2020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it Taliwan: Hamamatsu Photonics Taliwan Co., Ltd.: 8F-3, No. 158, Section2, Gongdao 5th Road, East District, 1002, Jaiwan R.O.C. Telephone: (88)03-659-0080, Fax: (886)3-659-0081, E-mail: info@hamamatsu.com.tm